EN CONTENTS

1 / SAFETY INSTRUCTIONS

- Important warnings _____ 14

2 / INSTALLING YOUR DISHWASHER

- Dimensions for building in appliances _____ 15
- List of parts supplied _____ 15
- Connecting to the water supply _____ 16
- Draining away the waste water _____ 17
- Electricla connection _____ 18
- Insertion into the niche _____ 19
- Levelling by adjusting the feet _____ 19
- Fitting the door panel (Cladding with a single panel) _____ 20
- Fitting the door panel (Cladding with two elements) _____ 21
- Appliances built-in under o hob _____ 22
- Fixing in the niche _____ 22
- Sound-proofing seals _____ 22
- Balancing the door (left and right) _____ 22
- Refitting the plinth _____ 23
- Table for cutting away the plinth _____ 23

Important:
When building in appliances, please use the attached installation diagram.

Important:
Please read this installations manual carefully in order to comply with the instructions for installing and fitting your machine.

NB:
This installations manual covers various models. There may be some slight differences between your appliance and the descriptions shown.

• *IMPORTANT WARNINGS*

Important:
After unpacking your appliance, make sure that it has not suffered any damage during transport. Never connect up a damaged appliance. If your appliance is damaged, please contact your dealer.

Danger:
If your appliance operates incorrectly, disconnect it (pull out the plug) or switch off the circuit concerned and close the water supply tap. Contact our After-Sales Service.

Important:
All the necessary electrical and plumbing work for installing the appliance must respectively be carried out by a qualified electrician and plumber.

– Once you have installed your appliance, ensure that it is not resting on the power cable or the water supply or drain hoses.
– The appliance must be kept disconnected from the mains supply throughout the whole installation process.
– Check that your appliance's Earth circuit complies with the prevailing regulations.
– The electrical connection details on the manufacturer's plate on your machine must match those for the mains power supply.

Important:
For safety's sake, do not leave your dishwasher's door fully open after use.
If your dishwasher is being installed on a carpeted floor, ensure that the feet are set to leave an air space under the appliance.

• *DIMENSIONS FOR BUILDING IN APPLIANCES*

You can insert your appliance under an existing worktop provided that the relevant niche corresponds to the dimensions on the sketch below (Fig. 01).

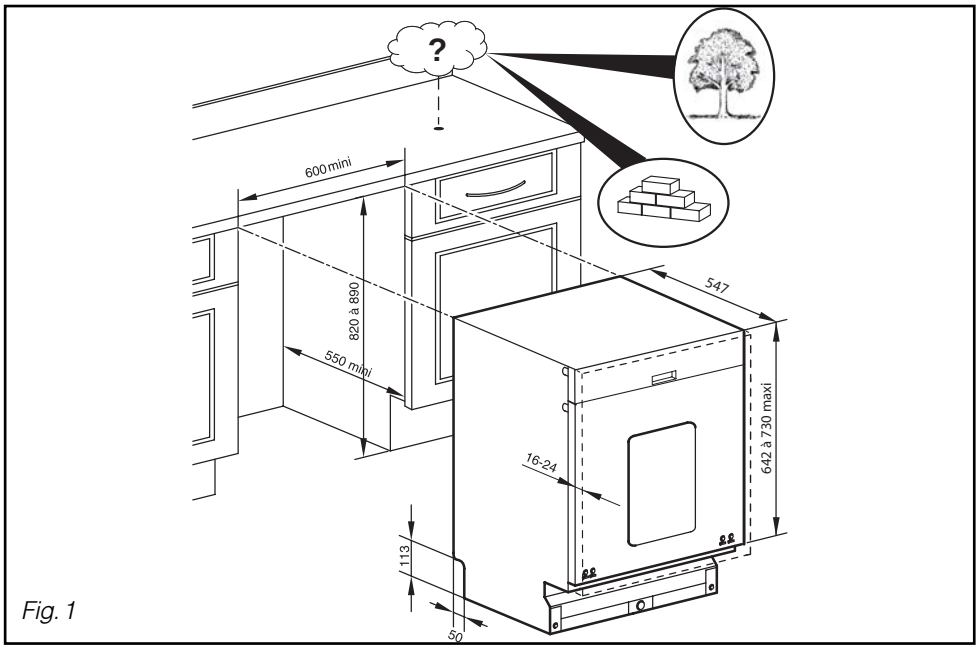

Fig. 1

• *LIST OF PARTS SUPPLIED*

P1	3	Cups for front feet
P2	1	Self-adhesive anti-condensation plate
P3	1	Foam sound-proofing seal
P4	1	Wrench for adjusting the front feet
P5	2	Sound-proofing seals + self-adhesive fixing strips (if necessary)

P6	2	Lower panel positioning screws
P7	2	L = 75 Panel fixing screws
P8	6	L = 40 Panel fixing screws
P9	2	OU / OR Screws for fixing the appliance to the unit
P10	1	Drain connection collar

• CONNECTING TO THE WATER SUPPLY

This dishwasher can be supplied with cold water or hot water up to a maximum of 60°C. When supplying with hot water, check that your original hose allows such connection (red marking on the hose). However, we recommend that you connect to the cold water supply. Your appliance is fitted with a supply hose 1.50m long.

Connect the hose to a tap with a threaded end, diameter 20/27 (3/4" BSP).
Check that the water pressure does not exceed the values below:
Flow: 10 l/min minimum.
Pressure: 1 to 10 bars (0.1 - 1 MPa) **A**.

If the water pressure is too high, please fit a pressure regulator. Please contact your local Water Authority for advice on the water pressure in your region.

Warning:
If you use a self-piercing tap, check that there is sufficient water flow.
Check that the hose seal is present and that the connection is tight **A**.
Do not re-use any previously used hoses for making the connection.

Avoid any kinks or constrictions in the hose, which could prevent the water from passing or slow down its flow, particularly when building in the appliance under the worktop **B**.
If the appliance is connected to new pipes or pipes that have not been used for a certain length of time, let the water run for a few minutes before connecting the water hose to avoid and deposits of sand or rust that could block the water hose's filter.

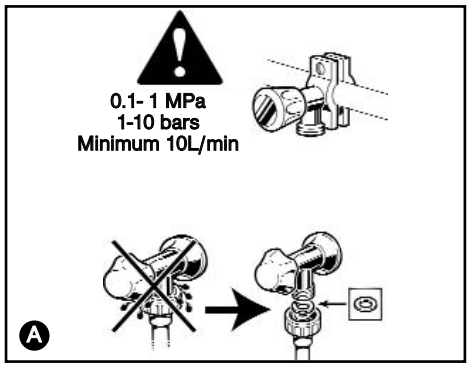

Danger:
The ↯ symbol indicates that the hose is fitted with an electrical device for cutting off the water supply (depending on the model). Do not leave this hose in water and do not cut it.

NB:
Any connection to a water conduit necessarily involves the risk of a leak occurring, whatever the precautions taken. Therefore, always close the water tap when you are not using your machine.

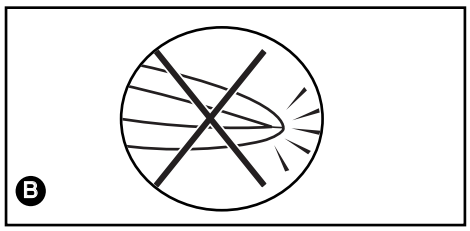

• *DRAINING AWAY THE WASTE WATER*

You can connect the end of the drain hose to:
- A ventilated U-bend (Fig. 2-1) or
- A sink U-bend (Fig. 2-1)

When connecting to a U-bend, you must remove the flapper from the U-bend. Then fully install the rubber end. If necessary, add a tightening collar (P10) .

NB:
Ensure that the drain hose is held in place with a tie to avoid any potential flooding.

The drain connection must be 0.30m (minimum) to 0.90m (maximum) above the floor (Fig. 2-1).

The drain hose's standard length is 1.50m. If necessary, you can increase the hose's length (up to 3m maximum). In this case, check that the appliance drains correctly. The hose must rest on the floor and only rise vertically close to the drainage system.

For appliances installed in vertical units, the drainage system must not rise higher than the top of the appliance (Fig. 2-2).

Important:
When fitting the hose, pull on it gradually so as not to kink it. (B).
Avoid any kinks or constrictions in the hose, which could prevent the water from passing or slow down its flow.

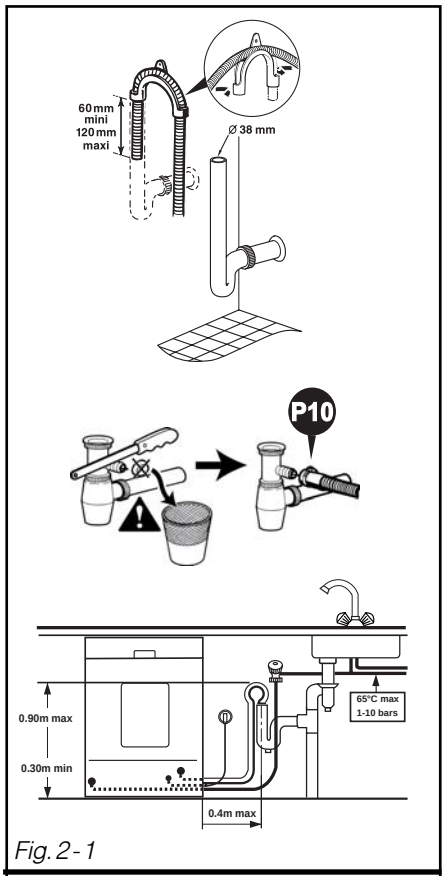

Fig. 2 - 1

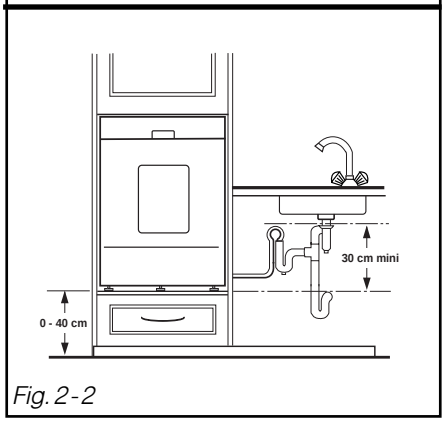

Fig. 2 - 2

• ELECTRICAL CONNECTION

The appliance must be at a standstill when connecting to the electricity supply circuit.

Before connecting your appliance, ensure that:
- The mains voltage indicated on the manufacturer's plate on your machine matches the voltage supplied by your installation.
- Your meter and the fuses can support the current intensity for your dishwasher. A fuse of at least 10A is required.

If you must connect your appliance to a different voltage from that indicated on your machine, connect an appropriate transformer.

NB:
Use the services of a qualified electrician to make the modifications and ensure that your electrical installation complies with the regulations.

This appliance must necessarily be connected directly to an earthed plug and socket.
In all cases, it must be connected in accordance with the prevailing regulations in the country concerned and any additional regulations from the local electricity utility.

Warning:
The plug and socket must be accessible even after your appliance has been installed.
The appliance must not be connected via an extension lead, a multiple socket or an electric time delay programmer C.

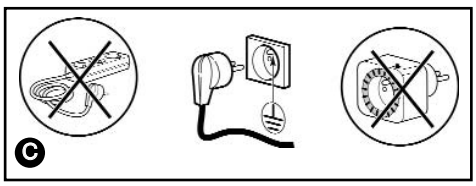

We cannot be held responsible in the event of an accident or an incident caused by the lack of or by a defective Earthing system.

Your dishwasher complies with European Directives 73/23/EEC (Low Voltage Directive) and 89/336/EEC (Electromagnetic Compatibility) as modified by Directive 93/68/EEC.

• Replacing the power cable

Danger:
For your safety's sake, this operation must only be performed by the manufacturer's After-Sales Department or by someone with similar qualifications in order to avoid any risks.

• Appliances delivered without a plug

Danger:
The wires in your appliance's power cable are coloured as follows:

- Green & Yellow	***Earth***
- Blue	***Neutral***
- Brown	***Live***

If the cable's colours do not match your plug, proceed as follows:

The wire coloured green and yellow must be connected to the connector in your plug marked with the letter E, the symbol ⏚ or coloured green and yellow.

The blue-coloured wire must be connected to the connector marked with the letter N or coloured black.

The brown-coloured wire must be connected to the connector marked with the letter L or coloured red.

• *INSERTION INTO THE NICHE*

- ***Glue on the anti-condensation plate P2 (Fig. 3.1)***
- ***Glue on the foam sound-proofing seal P3 (Fig. 3.1)***
- ***Clip the three cups P1 under the feet to make the dishwasher easier to slide (Fig. 3.1).***

If the worktop is in marble or a similar material, you must fix your dishwasher using the side screws; before inserting it into the niche, you must therefore unfold a flange on each side of the side panels (Fig. 3.2).

- ***Remove the hose brackets (Fig. 3.3)***
- ***Slide the appliance into the niche,*** ***TAKING SPECIAL CARE NOT TO KINK THE HOSES.***

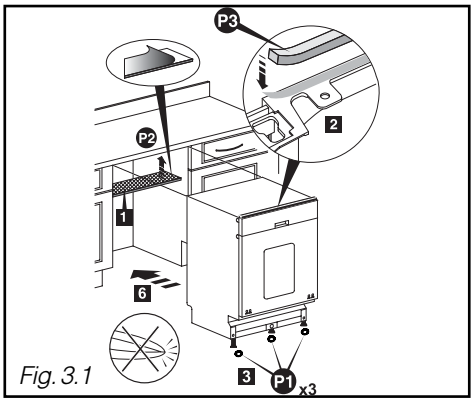

Fig. 3.1

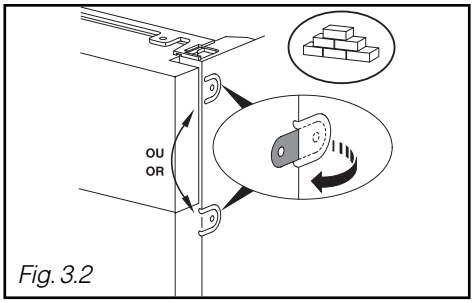

Fig. 3.2

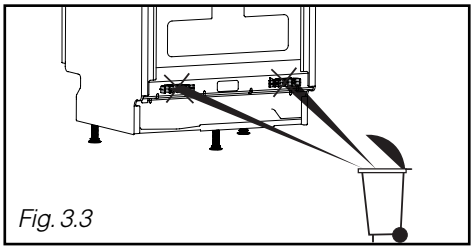
Fig. 3.3

• *LEVELLING BY ADJUSTING THE FEET*

The front feet are adjustable. Use the wrench provided to adjust them, if necessary.
The central foot can be adjusted using the red wheel (screwdriver with No. 8 plug, No. 8 pipe wrench or T20 Torx screwdriver).
The appliance must be correctly levelled so that the door closes and seals perfectly (Fig. 4).
Ensure that the dishwasher's door closes correctly, without catching or rubbing against the sides.

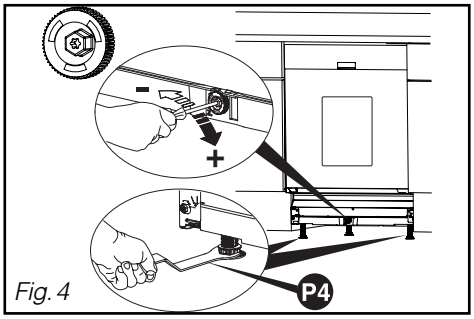

Fig. 4

• *FITTING THE DOOR PANEL (Cladding with a single panel)*

- Measure the distance between the floor and the bottom of the door panel on the adjacent unit (Dimension **B**, Fig. 5.1)

- Measure the distance between the floor and the marking on the bottom of the door panel (Dimension **A**)

- Calculate Dimension **D = A - B**, and draw a line for Dimension **D** on the back of the panel at the bottom (Fig. 5.2)

- Set the positions for the two screws at 262mm from the wood panel's axis and insert two screws P6. (Fig. 5.2)

- Position your door panel by engaging the 2 screws in the holes in the dishwasher's door (Fig. 6.1)

- If there is a problem with screwing, offset the screw P6 by 22 mm.

- Place the wood panel flat against the door (Fig. 6.2).

- Open the dishwasher's door while holding the panel flat up against the door. Centre the wood panel at the sides with respect to the control panel, if necessary. Insert the 2 screws P7 and the 4 screws P8 (Fig. 6.2).

Warning :
If the wood panel is very hard, ensure that you make a hole in advance before screwing the panel on.

NB :
If your appliance is supplied with a sound insulation sheet, glue this on before installing the door panel.

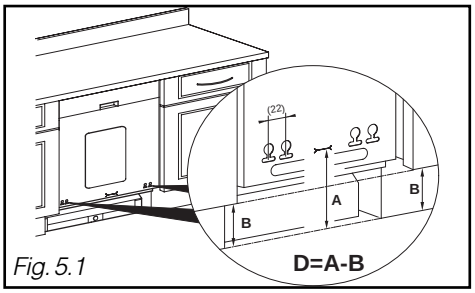

Fig. 5.1

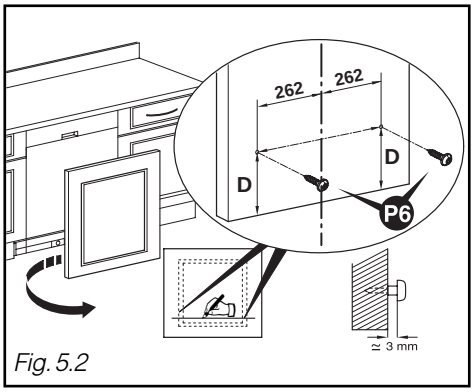

Fig. 5.2

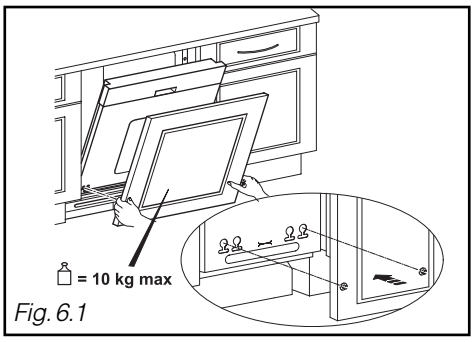

Fig. 6.1

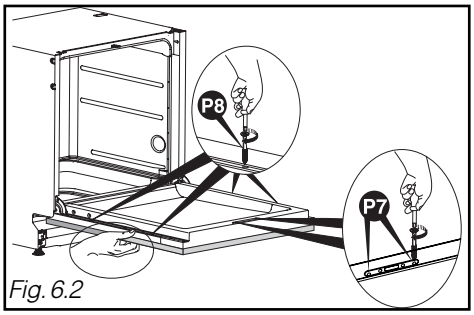

Fig. 6.2

FITTING THE DOOR PANEL (Cladding with 2 elements)

- To fit the first section, please refer to the previous chapter “FITTING THE DOOR PANEL (Cladding with a single panel) (Figs. 5.1 et 5.2).

- Position your door panel by engaging the 2 screws in the holes in the dishwasher’s door (Fig. 6.2 A)

- If there is any difficulty screwing, move the screw P8 22 mm.

- Place the wood panel flat against the door (Fig. 6.2 A).

- Open the dishwasher’s door while holding the panel flat up against the door. Centre the wood panel at the sides with respect to the control panel, if necessary. Insert the 4 screws P8 (Fig. 6.2 A).

- Measure the distance between the drawer and the door panel on the adjacent unit (Fig. 6.3).

- Place the false drawer front taking into account the distance just measured (using a wedge with a good thickness).

- Open the dishwasher’s door while holding the false drawer front up against the door. Centre the wood panel at the sides with respect to the door panel. Insert the 2 screws P7 and the 2 screws P8 (Fig. 6.4).

Warning :
If the wood panel is very hard, ensure that you make an initial hole before screwing it on.

Warning :
Then total weight of the door panel and the false drawer front must not exceed 10kg maximum.

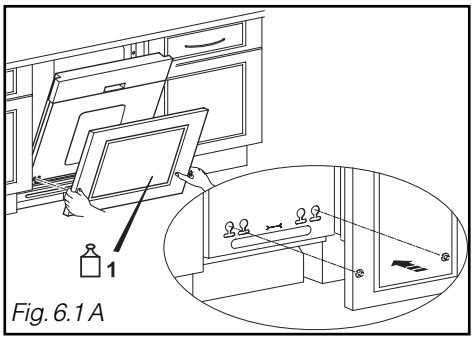

Fig. 6.1 A

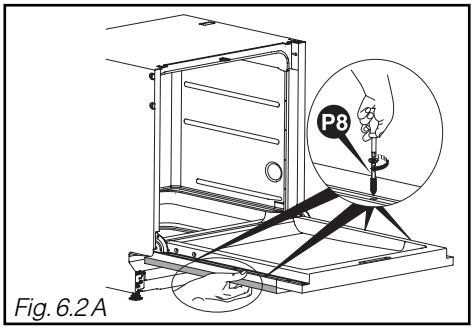

Fig. 6.2 A

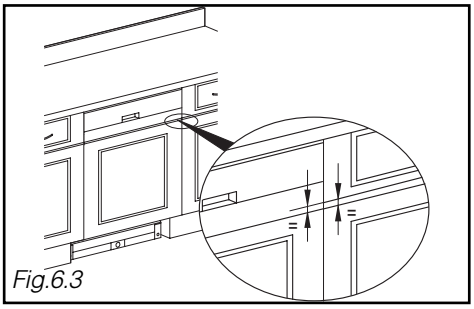
Fig.6.3

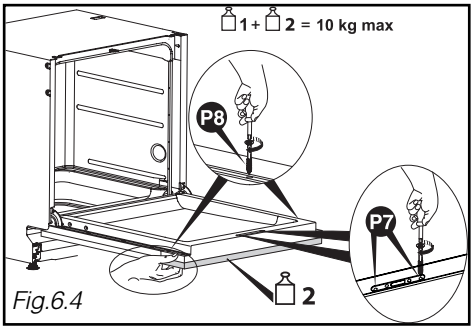

Fig.6.4

• APPLIANCES BUILT-IN UNDER A HOB

Danger:
If your worktop has a hob fitted above your dishwasher, you must fit thermal insulation on top of your dishwasher. You can obtain an insulation kit from your dealer. Remember to leave a space between the gas pipe and the top of your dishwasher.

• FIXING IN THE NICHE

Fasten the dishwasher under the worktop with the screws P9 (see Fig. 7) or using the flanges you have unfolded (Fig. 3.2).

Warning:
The screw provided is intended for a panel at least 16mm thick. If the panel is less than 16mm thick, change the screw or shorten it.

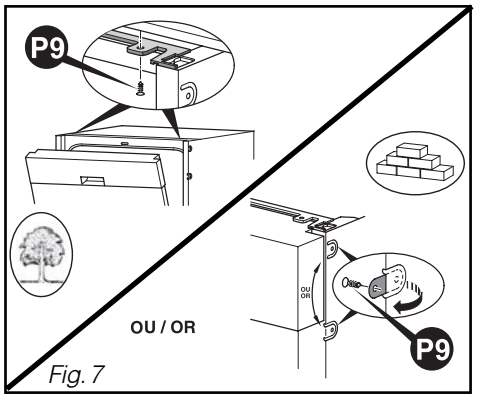

Fig. 7

• SOUND-PROOFING SEALS

To improve the built-in appliance's sound-proofing, fit the sound-proofing seals (depending on the model). (P6 on Fig. 8)

In the case of larger spaces, glue the seal to the panel using the adhesive strips supplied (P6 on Fig. 8)

If the appliance is fixed at the sides, you must cut down the heel of the seals P5 when fitting them to accommodate the fixing lugs (pincers).

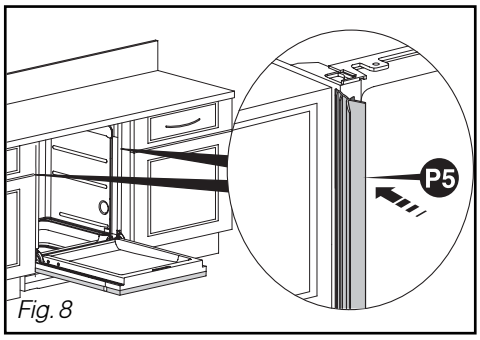

Fig. 8

• BALANCING THE DOOR (LEFT AND RIGHT)

Adjust the tension on the springs, if necessary, to compensate for the weight of the cladding panel. Adjust them identically on the right and the left (Fig. 9).
The door is correctly balanced when it dopes not fall heavily on opening and it remains horizontal in the open position.

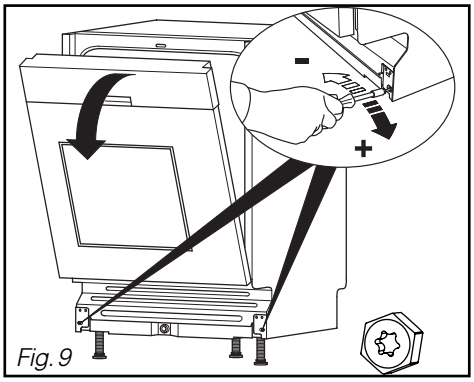

Fig. 9

• *REFITTING THE PLINTH*

Refit the plinth, cutting it away if necessary according to Dimension **P** (see table and Fig. 10.1)

Calculate dimension P (Table on last page):
- Take Dimension **B** from Fig. 6.1 and measure the gap **J** between the floor and the bottom of the dishwasher. Calculate **B - J**.
- Measure the plinth depth **E** (Fig. 10.1) between the unit's plinth and front of the unit. Take the value for **P** from the table provided by **E** and **B – J** (e.g. if **E = 100** and **B – J = 140**, then **P = 23**).
- Cut away the plinth across a width of 600mm to the depth for the value for **P**.

If there will be a specific plinth for the dishwasher, you must obtain a separate fixing kit (32X3252) from the After-Sales Department. In this case, the plinth height is **H = B - P** (Fig. 10.2).

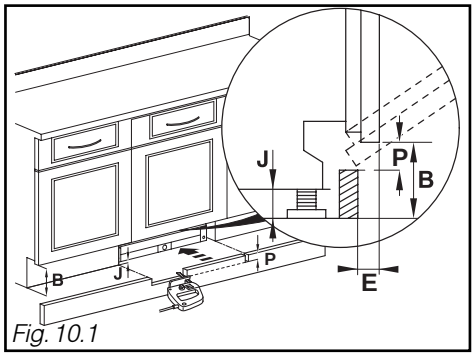

Fig. 10.1

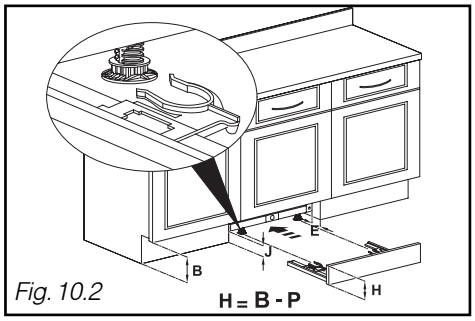

Fig. 10.2

• *TABLE FOR CUTTING AWAY THE PLINTH*

	Cut-away depth P =												
B - J \ E	10	15	20	25	30-75	80	85	90	95	100	105	110	115
170	46	49	51	52	54	52	50	47	44	41	36	30	23
165	42	45	47	48	50	48	46	43	40	37	32	27	20
160	39	41	43	45	46	44	42	40	37	33	29	24	17
155	35	38	40	41	43	40	39	36	34	30	26	21	15
150	32	35	37	38	40	37	36	34	31	28	24	19	13
145	30	32	34	36	37	35	33	31	29	25	22	17	12
140	28	30	32	33	35	32	31	29	26	23	20	16	11
135	26	28	30	31	32	30	29	27	24	22	18	14	10
130	24	26	28	29	30	28	27	25	23	20	17	13	9
125	23	24	26	27	29	27	25	23	21	19	16	12	8
120	21	23	25	26	27	25	24	22	20	18	15	11	8
115	20	22	23	24	26	24	22	21	19	17	14	11	7
110	19	21	22	23	24	22	21	20	18	16	13	10	7
105	18	20	21	22	23	21	20	19	17	15	12	10	6
100	17	19	20	21	22	20	19	18	16	14	12	9	6
95	16	18	19	20	21	19	18	17	15	13	11	9	6
90	16	17	18	19	20	18	17	16	15	13	11	8	6
85	15	16	17	18	19	18	17	15	14	12	10	8	5
80	14	15	17	17	18	17	16	15	13	12	10	8	5

EN INSTRUCTIONS FOR USE

Dishwasher

De Dietrich

Dear Customer,

You have just acquired a ***DE DIETRICH*** *dishwasher and we would like to thank you.*

Our research teams have created this new generation of appliances for you. Their quality, design, features and technological advances make them exceptional products, and reveal our unique know-how.

Your new ***DE DIETRICH*** *dishwasher will blend harmoniously into your kitchen and will perfectly combine washing and drying performance and ease of use. We wanted to offer you a product of excellence.*

In the ***DE DIETRICH*** *product range, you will also find a wide choice of hobs, ovens, microwaves, hoods, cookers, fridges, freezers, that you can coordinate with your new* ***DE DIETRICH*** *dishwasher.*

Visit our website ***www.dedietrich-electromenager.com****, where you will find our latest innovations as well as useful and complementary information.*

DE DIETRICH
Setting New Values

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technical advances to their technical and functional features and appearance.

Warning :
Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.

www.dedietrich-electromenager.com

EN **CONTENTS**

1/ FOR THE USER'S ATTENTION
- Safety instructions ____ 4
- Protection of the environment ____ 5
- Economical, environmentally friendly washing ____ 5

2/ DESCRIPTION OF YOUR APPLIANCE
- General presentation of the dishwasher ____ 6
- Presentation of the control panel ____ 7

3/ INFORMATION ____ 8

4/ WHAT TO DO BEFORE FIRST USING THE MACHINE
- Measure the water hardness and select the type of detergent ____ 9
- Hardness table ____ 9

5/ DETERGENT PRODUCTS AND ADJUSTING THE WATER SOFTENER
- For traditional products ____ 10
- For multi-purpose products ____ 11

6/ LOADING OF REGENERATING SALT ____ 12

7/ LOADING OF RINSING PRODUCT ____ 13

8/ YOUR DISHWASHER'S EQUIPMENT
- The lower basket ____ 14
- The upper basket ____ 15
- The cutlery basket ____ 16

9/ SETTING THE PARAMETERS ____ 17

10/ WASHING PROGRAMMES TABLE ____ 18

11/ PROGRAMMING ____ 20

12/ YOUR DISHWASHER'S SAFETY SYSTEMS ____ 22

13/ CLEANING YOUR APPLIANCE
- Cleaning the waste filters ____ 23

14/ IF OPERATING ABNORMALITIES OCCUR ____ 25

15/ AFTER-SALES SERVICE ____ 30

16/ INDICATIONS FOR THE TESTING LABORATORIES ____ 31

Important :
Keep this user's manual with your appliance. If the appliance is sold or transferred to someone else, ensure that the manual is with it. Please take note of these instructions before installing and using your appliance. They have been drawn up for your own and other people's safety.

• SAFETY INSTRUCTIONS

• Installation

– When you receive your appliance, unpack it or have it unpacked immediately. Check that it has not suffered any damage during transport. Express any reservations in writing on the delivery note, of which you keep a copy. Never connect up a damaged machine. If your appliance is damaged, please contact your dealer.
– Before proceeding to connect up your machine, please refer to the instructions in your Installation Guide.
– Your dishwasher must be kept disconnected from the mains supply throughout the whole of the installation process.
– The electrical connection details on your appliance's description plate must comply with those for the mains supply.
– The socket must still be accessible once your appliance has been installed.
– Do not alter or attempt to alter the appliance's characteristics. This could put you at risk.
– If your installation has to be altered, only entrust the electrical and plumbing work to a qualified electrician or plumber respectively.
– Your appliance is designed for normal domestic use. Do not use it for industrial or commercial purposes or for any other purpose than that for which it has been designed.
– The dishwasher's walls must not be pierced under any circumstances.

• Children's safety

– This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
– This appliance must only be used by adults. Ensure that children do not touch it and do not use it as a toy. Ensure that they do not operate the appliance's controls.
– Keep young children away from the appliance when it is operating.
– Detergents contain irritant and abrasive substances. These products can have caustic effects on the eyes, the mouth or the throat. They can be extremely dangerous if ingested. Avoid any contact with the skin and the eyes. Ensure that the appliance's detergent container is empty at the end of the washing cycle.
– Place detergents out of children's reach and do not put any detergent in the machine until just before you start the washing programme.
– The water in your dishwasher is not drinking water; this is why children must not go near the appliance when its door is open.
– Do not let your children play or sit on the door when it is open.
– Once you have unpacked your appliance, place the packaging out of children's reach.
– Keep all the packaging materials (e.g. plastic bags, polystyrene, etc.) out of children's reach because they can be dangerous for children (ie. risk of suffocation).

• Use

– When machine is running, do not open door. This may provoke steam leakage or splattering of water.
– Only use products specially designed for your dishwasher (water softening salt, detergent and rinsing products).
– As far as possible, avoid opening the dishwasher's door when it is operating, and in particular during the heating phases, because scalding steam may escape or you may be splashed with hot water. The machine is fitted

with a safety system that immediately blocks the dishwasher's operation if the door is opened.
– Never use chemical solvents in your appliance because these could cause an explosion.
– Always close your appliance's door after loading or removing your items.
– Do not lean or sit on your appliance's door when it is open.
– You are strongly advised to disconnect the machine after use and turn off the water supply.
– Unplug your machine before carrying out any technical work on it.
– Avoid placing your machine immediately next to a cooking or heating appliance to prevent any risk of heat damage;
– Do not place any items in your machine, which are not certified as dishwasher safe.
– If you have removed an item before the end of the washing programme, it is important to rinse it carefully to remove any residual washing products.
– If your appliance breaks down, never attempt to repair it yourself. Any repairs made by non-qualified personnel can cause significant damage or lack of control.
– The machine complies with applicable safety regulations. Any repairs should be carried out by qualified technicians. Repairs or changes that do not conform may be dangerous for the users. In case of replacement, only use original parts.
– If the machine malfunctions due to other causes than those mentioned in this booklet, disconnect the machine (remove the plug) or break the circuit concerned and contact Kleenmaid's after-sales service.

• *ENVIRONMENTAL PROTECTION*

This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.
Broken machines should be taken to the closest recycling centre. Destroy the door closing system so it no longer works (children may close themselves in whilst playing and suffocate). Cut the electric cable after having removed the plug from the socket.

Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your council for the used appliance collection points closest to your home.
We thank you doing your part to protect the environment.

• *ECONOMICAL, ENVIRONMENTALLY FRIENDLY WASHING*

– Remove any food residue from your crockery (bones, pips, etc.)
– Do not pre-wash your items by hand (useless waste of water).
– Utilise your dishwasher's capabilities to the full for an economical, environmentally friendly wash.
– Always select a washing programme suitable for the crockery type and how dirty they are.
– Avoid overdosing with detergent, regenerating salt and rinsing liquid. Follow the recommendations in this guide (pages 9-10-11) and the instructions on the product packs.
– Ensure that the water softener is correctly set (see pages 10-11).

• *GENERAL PRESENTATION OF THE DISHWASHER*

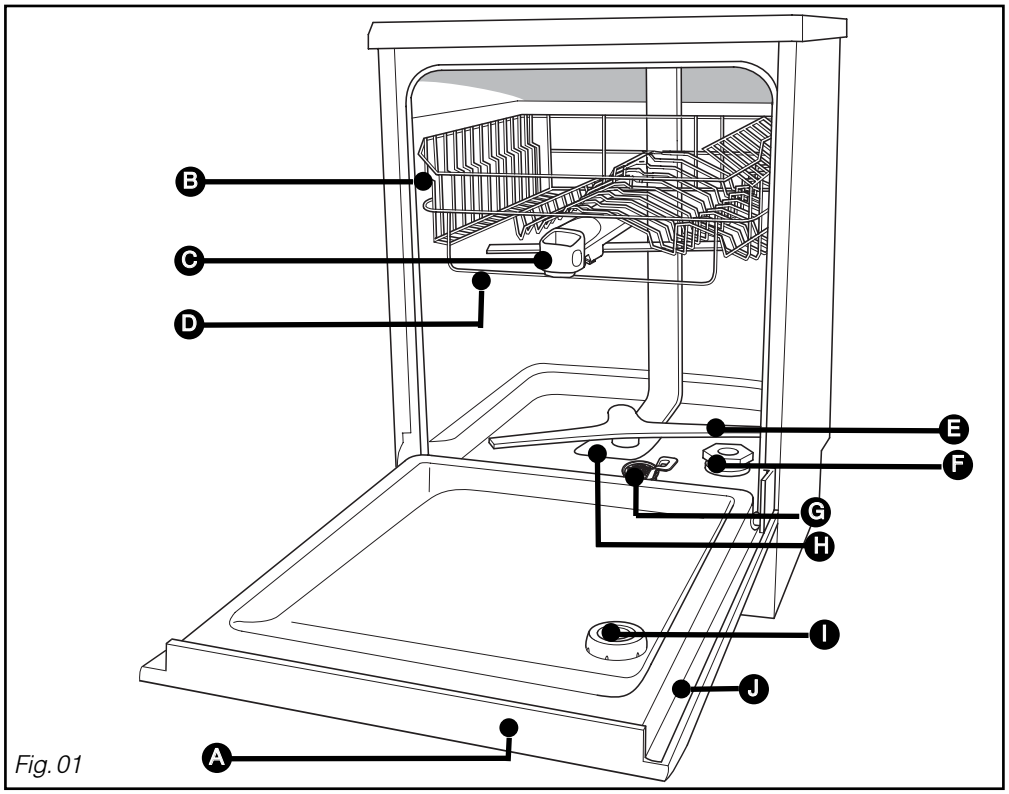

Fig. 01

- **A** ***Control panel***
- **B** ***Upper basket***
- **C** ***Washing products dispenser***
- **D** ***Anti-blocking gauge wire***
- **E** ***Lower sprinkler arm***
- **F** ***Regenerating salt tank***
- **G** ***Waste filter***
- **H** ***Main filter***
- **I** ***Rinsing product dispenser***
- **J** ***Description plate (After-Sales Ref)***

Advice:
This user's guide is applicable to several models. There may be some slight differences in the details and the equipment between your appliance and the descriptions provided here.

• PRESENTATION OF THE CONTROL PANEL

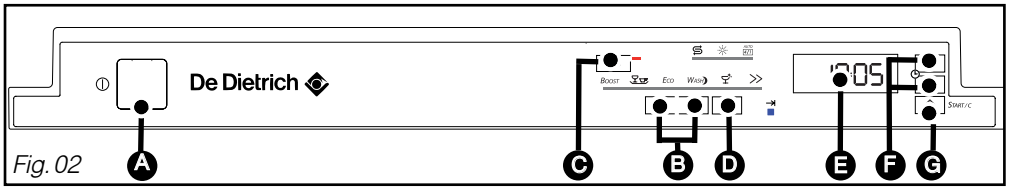

Fig. 02

Ⓐ *On/Off:*
Press this button to start your dishwasher.

Ⓑ *Choosing a programme:* briefly press one button or the other in succession to select your programme.

Ⓒ ICS *: Intelligent Control System*
press this button to select the Automatic programme.

Ⓓ *Set :*
• A long press: Access to the Settings menus:
- Set the current time,
- Set the water softener,
- Activate or deactivate use of “regenerating salt”, “rinsing product” or “Washing product” (depending on the water softener setting – see next page).
- Beep at end of programme,
- Set screen brightness.

Ⓔ *The screen* shows you the current time, the finishing time, the remaining time for the programme and the parameter settings.

Ⓕ *Delaying the end of a programme:*
Press one of the buttons or the other to select the time for the programme to end.

Ⓖ *Start/Cancel:* Briefly press this button to start your programme.
If you make an error, to cancel a selection or cancel a programme while it is running, hold down this button for 3 seconds.

The indicator lights:

Salt:
When lit, it indicates lack of regenerating salt

Rinsing liquid:
When lit, it indicates lack of rinsing product

AUTO 4/1 ***Washing product:***
Indicates that your dishwasher is set for using “2, 3, or 4-in-1” tablets.

→| ***End :***
lit; indicates that your programme has finished

Advice:
A short audible signal (beep) confirm the button’s selection, except for the “On/Off” button.

Important:
To obtain impeccable washing and drying results from your dishwasher without any marks, you must set it carefully using the water softening system, which utilises regenerating salt.

As rainwater infiltrates into the ground it picks up mineral salts; some minerals are found in solid form and are commonly called 'lime'. This reduces the detergent's washing performance and leaves white marks on the crockery.
The more lime there is in the water, the 'harder' the water is.

- Use the most suitable washing products for the hardness of your town's water supply.
- There are several types of products:

For an impeccable clean, opt for using traditional products together:

① ***Washing product*** for a perfect clean (standard powder, liquid or tablets).

② ***Regenerating salt*** for your dishwasher's water softener to work correctly.

③ ***Rinsing liquid*** to assist drying and eliminate drip marks.

Important:
Never use normal washing-up liquid.

For ease of use <u>and in certain water hardness conditions only (<35°F),</u> <u>multi-purpose products</u> can make the use of regenerating salt and rinsing liquid unnecessary.

- ***"Two-in-one" tablets*** contain detergents and rinsing liquid or an agent serving the function of the salt.
- ***"Three-in-one" tablets*** contain detergents and rinsing liquid as well as an agent serving the function of the salt.
- ***"Four-in-one" tablets*** also contain additives that prevent wear on poor quality glasses or the risk of stainless items corroding.

Important:
Follow the instructions in the user's manual and the recommendations on the multi-purpose detergent's pack.

NB:
If in any doubt, please contact the detergent's manufacturer if the items are very wet at the end of the programme or if chalky deposits appear.

• *MEASURE THE WATER HARDNESS AND SELECT THE TYPE OF DETERGENT: TRADITIONAL OR MULTI-PURPOSE*

In one simple action, you can test the your water's lime content using the testing strip supplied with your dishwasher. Alternatively, contact your local water utility to ascertain your water's hardness.

– Let the water run from the tap for a few moments.
– Fill a glass with water.
– Take the test strip from its holder and immerse it for 3 seconds.
– Wait 1 minute, shake it and look at the colours to ascertain your water's hardness.

• *HARDNESS TABLE*

Test strip	□□□□□	■□□□□ ■■□□□	■■■□□	■■■■□	■■■■■	■■■■■
Hardness	0-10°F	10-25°F	25-40°F	40-55°F	55-70°F	> 70°F
Water	Soft	Slightly hard	Slightly hard	Hard	Hard	Very hard
Water softening and use of salt	Optional	Essential if using traditional products	Essential if using traditional products	Mandatory	Mandatory	Mandatory

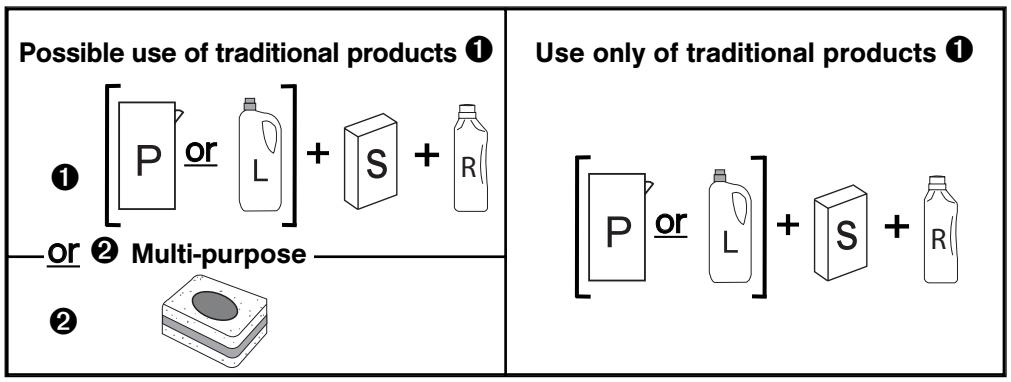

❶ **Traditional products:**
P : **P**owder detergent or **L** : **L**iquid detergent + **S** : Regenerating **S**alt + **R** : **R**insing product
❷ **Multi-purpose products:** Multi-purpose tablets

• FOR TRADITIONAL PRODUCTS

• Your machine must be specially adjusted to use traditional products.

• Proceed as follows to adjust the water softener on the control panel:

– Access setting mode by holding down the "SET" button until you hear a double audible signal (long beep). Then press twice briefly to access the water softener setting.



– The water softener setting is displayed ont he screen (for example c3).
– To adjust and alter the setting to suit the water hardness, keep on briefly pressing one of the keys or the other. The screen shows you the setting c0, c1, c2 etc...
– The setting is validated automatically after 10 seconds if the "SET" button in not pressed again.
– Pressing "SET" enables you to validate the setting and move on to the next parameter.

	Testing strip						
	Hardness	0-10°F	10-25°F	25-40°F	40-55°F	55-70°F	> 70°F
Setting	Traditional product	c0	c1	c2	c3	c4	c5

Factory setting : c3

Important:
It is very important to set the water softener correctly.
- If the setting is too low, there is the risk of chalky marks appearing.
- if the setting is too high, there is the risk of causing clouding of the glasses.

If you relocate, adjust the water softener setting as required.

• Traditional tablets

Non-multipurpose tablets should be placed in the external compartment (Fig 04) or, for optimum performance, pull out the dispenser drawer and lay the tablet inside (Fig 05).

• Powders or liquids (Fig 13)

Fill at least up to the minimum mark for slightly dirty crockery and to the maximum mark for dirty crockery. If the crockery is very dirty and for programmes with a pre-wash we recommend that you add 5g of detergent (a dessert spoonful) into your dishwasher's tub in accordance with the programmes table.

Important:
Keep these products out of children's reach and away from dampness.
Only use products specially designed for dishwashers.

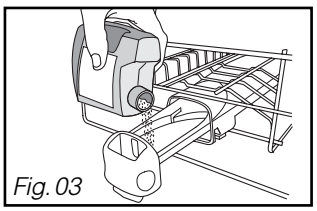
Fig. 03

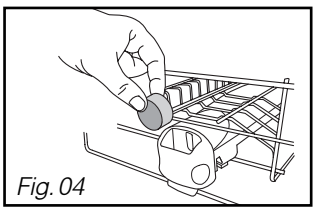
Fig. 04

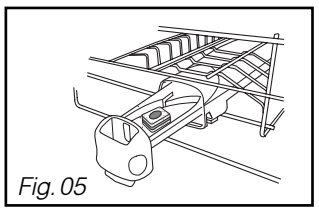
Fig. 05

• *FOR MULTI-PURPOSE PRODUCTS* AUTO 4/1

• *Your appliance can be specially set to use multi-purpose if the water hardness is < 25°F.*

Advice:
To provide better coverage of the wide range of multi-purpose products available, your dishwasher's "AUTO 4/1" option has two possible settings, accessible via the "Set" button.

"Extra Dry" improves the drying results in the event of reduced performance from the ***"2-in-1", "3-in-1" or "4-in-1" types of multi-purpose product.***

"Sparkling Clean" enables you to prioritise the sparkle of your crockery whatever the type of multi-purpose product used.

• *Proceed to set water softener*

– Access setting mode by holding down the "SET" button until you hear a double audible signal (long beep).
– The water softener setting is displayed ont he screen (for example c3).
– To use multi-purpose tablets, you must select setting c0 or c1, depending on the water hardness. To do this, keep on briefly pressing one or other of the < > keys until you reach the desired setting.

• *Proceed to select the "Multi-purpose AUTO 4/1 " option and set it*

– OFF : deactivates the "AUTO 4/1" option.
– On : corresponds to activation of the "AUTO 4/1" option with the "Sparkling Clean" setting. This enables you to prioritise a brilliant finish for your crockery.
– On : corresponds to activation of the "AUTO 4/1" option with the "Extra Dry" setting. "Extra dry" enhances the drying results if performance is reduced.
– The "AUTO 4/1" light then illuminates permanently if this option has been selected.
– The setting is validated automatically after 10 seconds if the "SET" button in not pressed again.
– Pressing "SET" enables you to validate the setting and move on to the next parameter.

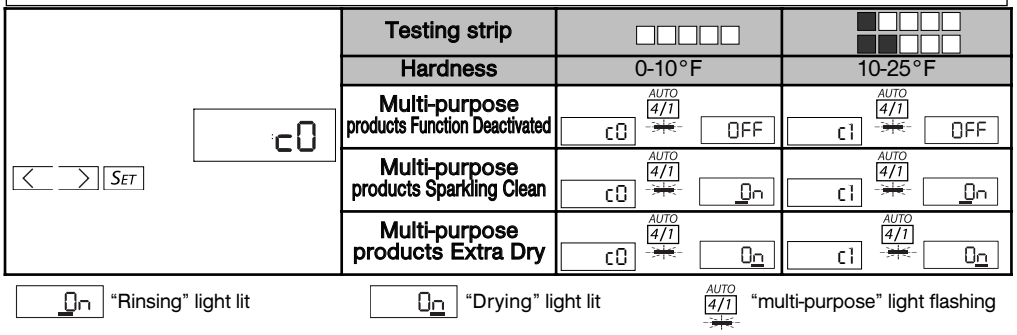

NB:
You can deactivate the "Salt" and "Rinsing" product lights if you are using multi-purpose products; this is done by using the "SET" button (page 17)

• *Loading the multi-purpose tablet dispenser*

To assist in loading the detergent, the distributor is situated on the front of the upper basket. It is compatible with all the products recommended for dishwashers.

• ***Place the tablet*** in the external compartment (Fig 04 on previous page) or, for optimum results, pull out the distributor's drawer and lay the tablet inside (Fig 05 on previous page).
- Close the dispenser.

• *Loading of regenerating salt (Fig 06)*

Filling with salt is essential for providing a good wash without marks. It regenerates the resins that soften the water, by removing its lime content (unless the mains water supply is soft enough). Refer to “Setting the water softener”.

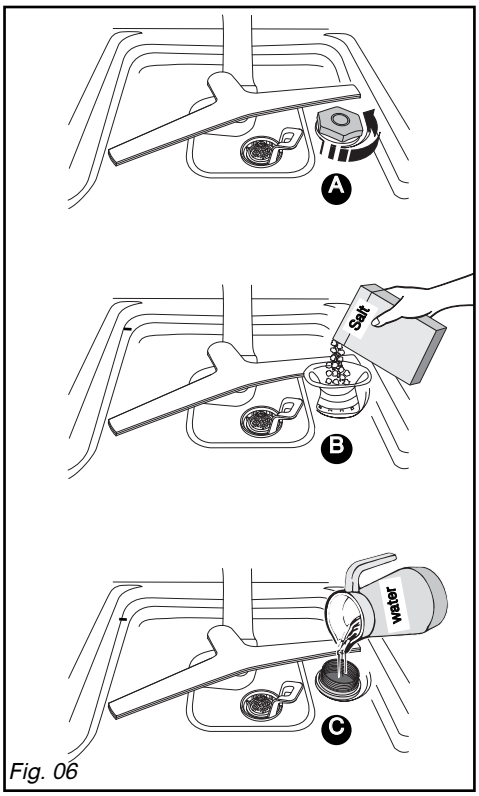

Fig. 06

Important :
Only use special dishwasher regenerating salt. Do not use table salt or any type of cooking salt, this could damage your appliance’s water softener.

A Unscrew and remove the stopper on the salt tank.

B Fill the tank with regenerating salt specially designed for dishwashers.

C Use the funnel supplied with your dishwasher. The first time, top up with water up to the rim of the tank.

• *Regenerating salt indicator:*

This illuminates when salt must be added. After the tank has been filled with regenerating salt, the indicator light may remain lit until the salt has dissolved sufficiently, usually after one cycle (of if the tank has not been filled completely; for example, when first putting the machine into service using the sample).
This can be deactivated as indicated in the paragraph “For multi-purpose products” setting table.

Important
If the salt overflows when filling the tank, to avoid oxidization of the tub it is advisable to remove the salt crystals or to run a Prewash programme.

• *Loading of rinsing product (Fig. 07)*

Important :
Only use a rinsing product designed for dishwashers. The rinsing product ensures your items shine and are well dried.

Ⓐ Ⓑ When first putting the machine into service, fill the tank until the level is flush with the top of the adjustment lever. Pour in at least all the rinsing product provided.
The tank contains 120 ml (approximately one glass)

The original setting is in the centre (middle position: reference mark 2). If you encounter marks or poor drying after a few cycles, you can adjust the setting using the adjustment lever (fig 07 Ⓒ; Reference mark 3 will increase the setting).
- Close the tank lightly

• Rinsing liquid indicator light: ✳
This illuminates when rinsing product is required.
It can be deactivated as shown in the paragraph “For multi-purpose products” setting table.

Important :
If any of the product overflows during filling, sponge up the excess to avoid producing foam.

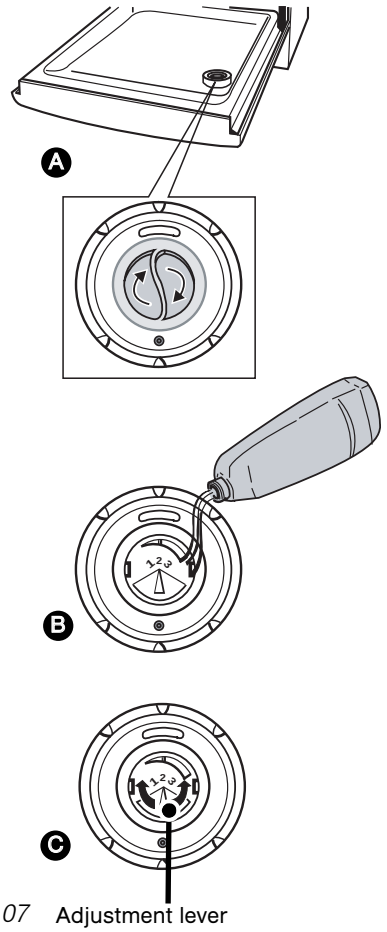

Fig. 07 Adjustment lever

Very important
Items not suitable for washing in a dishwasher:
- Wooden cutting boards
- Stainless steel utensils or plastic utensils that are not heat-resistant
- Copper or pewter items
- Glued crockery and cutlery
- Cutlery with wooden, horn or mother-of-pearl handles
- Antique or hand-painted porcelain
When purchasing crockery, glasses or cutlery, ensure that it is dishwasher-safe

• *THE LOWER BASKET*

Arrange your items so that the water can circulate freely and spray over all the utensils.
Place large diameter dishes and pans at the sides.
Do not intersperse, jam together or superimpose flat plates and concave dishes (Fig. 08).
The flexible racking spikes makes it easier to arrange your large dishes (Fig. 09).

Advice:
When you re-insert the lower basket, ensure that nothing catches on the oversize plate barrier to avoid blocking the rotating spray arm.

Unloading your items
Empty the lower basket to avoid drips from the upper basket falling onto the lower basket.

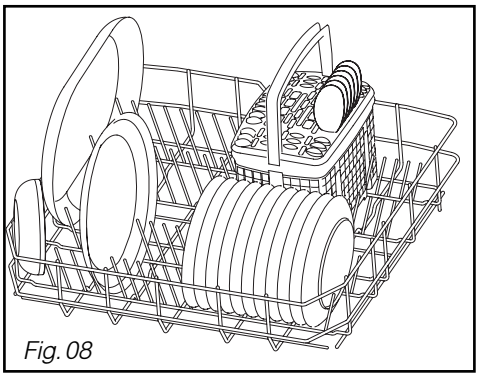
Fig. 08

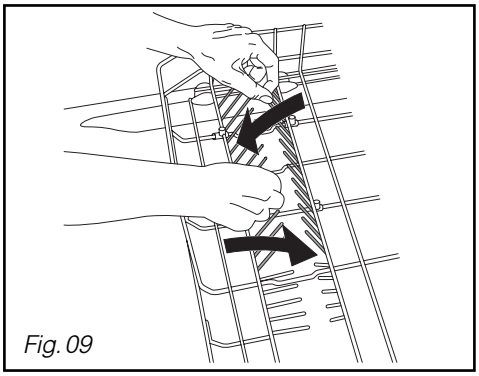
Fig. 09

• *THE UPPER BASKET*

This basket is particularly designed to take glasses, cups, ramekins, small salad bowls, bowls and saucers.
Arrange your items methodically to save on space (arranging glasses, cups or bowls together).
You can also arrange cups, ladles, etc. on the folding cup racks (Fig. 10)

Advice:
Position the cavities of glasses, cups or bowls facing downwards.

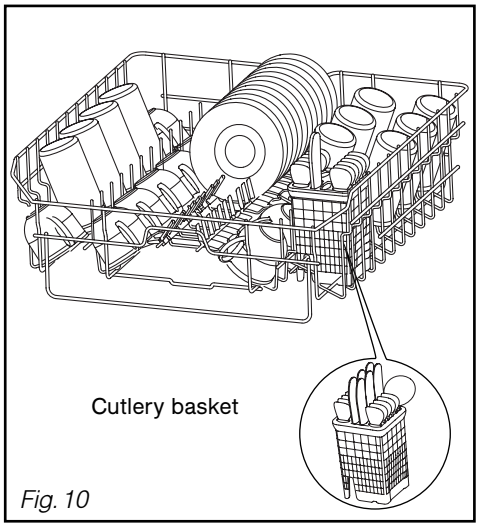

Fig. 10

• Adjusting the height of the upper basket

For large dishes to be loaded in the lower basket, the upper basket must be set the to high position. This can be done with the basket fully loaded (Fig. 11)

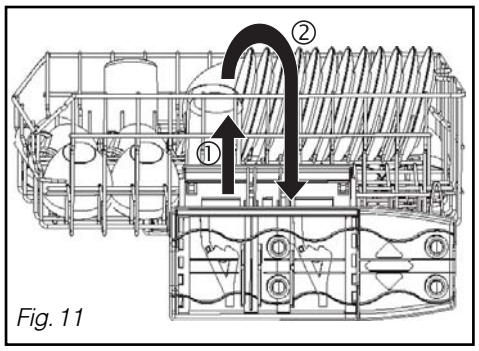

Fig. 11

① Setting in HIGH POSITION:
Gently raise your basket on each side until it engages.

② Setting in LOW POSITION:
Raise your basket completely on both sides to unlock it and then lower it to the low position.

Important :
Check that the two slides are set to the same height and the basket is horizontal.

• *THE CUTLERY BASKET*

The cutlery basket slides to allow flexible loading.
It can be placed anywhere in the lower basket. You can therefore make a variety of loads depending on the items (Fig. 12).

If your cutlery items or your dishes are too large, alter the height setting for the upper basket.

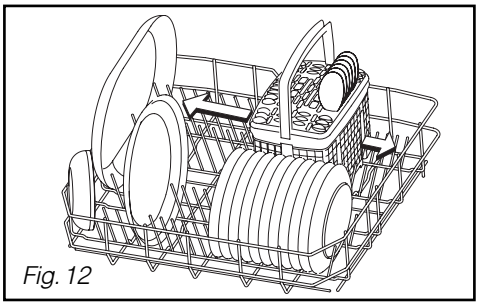
Fig. 12

Movable grills are available for if you wish to load your cutlery in an orderly manner (Fig. 13).
For optimum washing and drying, use these separation grills partially or totally.

Point the handles on the cutlery downwards.

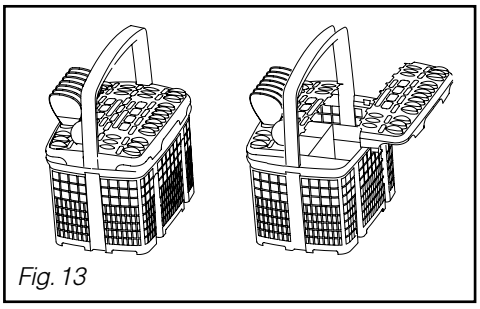
Fig. 13

Important :
For safety reasons, we recommend that you place knives with pointed ends with the point facing downwards in the cutlery basket (to avoid the risk of an accident).
Long-bladed knives and other sharp kitchen utensils must be placed flat in the upper basket.

Avoid washing cutlery with horn handles in your dishwasher.
Separate silverware from other metals using the separation grill.

• SETTINGS POSSIBLE USING THE "SET" AND SELECTION BUTTONS:

• 1 long press on the "SET" button and then a short press enables you to move on to the following parameters.
Set the parameters by pressing one of the programme selection buttons or the other.
Move on to the next parameter by pressing "SET".



Display

1 long press

Briefly press the "SET" button once and then press one or other of the selection buttons



> Setting the clock (hour)

To do this, hold down the "SET" button. When the time starts to flash, press one of the selection buttons or the other until you reach the desired time. Press SET to move on to the next parameter.

> Setting the clock (minutes)

Proceed in the same way as above; press one of the selection buttons or the other to set the minutes.

> Setting the water softener

Set to the level corresponding to the hardness of your water: c0 to c5.



> Product use

You can cancel display of the relevant indicators, depending on the products used:
- Salt Set to OFF if you do not use salt or f you are using multi-purpose tablets.
- Rinsing product Set to OFF if you do not use a rinsing product or if you are using multi-purpose tablets.

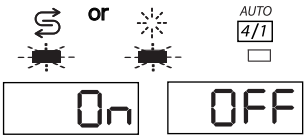

> Multi-purpose tablets: only for c0 or c1 activate the "AUTO 4/1" option

- For optimum product performance (depending on the water softener setting table on page 11), set:
- OFF To deactivate the "4/1" option.
- On to select "4/1" with **"Extra Dry"**
- On to select "4/1" with **"Sparkling Clean"**.

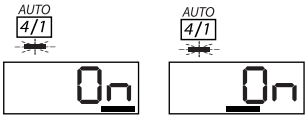

> Beep at the end of the programme

On to activate the function; OFF if you do not wish not to hear the beep at the end of the program.



> Screen brightness

Set the screen brightness to suit yourself from Lu1 minimum to Lu5 maximum.



Advice:
The setting is confirmed automatically when you move on to the next parameter or if the "Set" button is not pressed again within the next 10 seconds.

• *PROGRAMMES TABLE*

ITEM TYPE (porcelain, pans, cutlery, glasses)	Resistant	Mixed	Mixed
FOOD RESIDUE: Quantity, type and amount	**Very dirty** A large amount of dried-on residue, baked-on stains, grease, residue from frying, cooked cheese, sauce, etc.	**Normally dirty** A normal amount of dried-on and greasy residue on everyday items. Faster, but consumes more energy.	**Normally dirty** A normal amount of dried-on, adhering residue on everyday items.
PROGRAMMES	*BOOST*	**Normal**	*ECO*
PROGRAMME SEQUENCE	Hot pre-wash Washing at 70°C Rinse Hot rinse Air Drying	Pre-wash Washing at 65°C Rinse Hot rinse Air Drying	Pre-wash Washing at 55°C Rinse Hot rinse Air Drying
As an indication only:			
Duration in min	130’	90’	130’
Water (L)	17	17	15
Energy (Kwh)	1,7	1,5	1,3

WASH

These values refer to normal conditions of use with separate products (detergent, salt, rinsing product). They may vary according to the load, the temperature, if you use combined washing products, the water hardness and the supply voltage.

EN 10/ WASHING PROGRAMMES

	Mixed	Mixed	Mixed	Mixed
	Normally dirty Recommanded for normally soiled load, less consuming in energy.	**Glass or fragile porcelain** Small amount of easy to remove residue.	**Very short 30-minute** wash specially designed for a small amount of daily items with a limited amount of non-greasy residue, not dried on.	**Automatically detects the amount of washing up and the level of soiling.** Normal amount of dried on residue on everyday items. Faster, but consumes more energy.
Eco	WASH	Fragile	Rapid >>	ICS
				Pre-wash
	Washing at 50°C	Washing at 45°C	Washing at 45°C	Washing at 55/65°C
	Rinse	Rinse	Rinse	Rinse
	Hot rinse	Hot rinse	Hot rinse	Hot rinse
	Air Drying	Air Drying	Natural drying	Air Drying
	140’ 12 1,05	85’ 14 0,8	30’ 11 0,8	90’ - 110’ 17 - 19 1,3 - 1,5

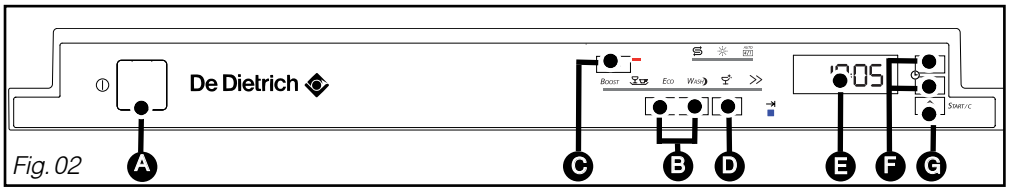

Fig. 02

Advice:
Consult the Programmes table on the preceding pages to determine the programme you need for the type of items, the quantity and the amount of food residue.

• *Starting the appliance*

Press the "**On**/Off" button **A** to switch the machine on.

• *Starting a programme immediately*

Select your programme by pressing one of the selection buttons **B**.

– The Auto programme can be accessed by pressing the "ICS" button **C**.

– The ⟨ button scrolls the programmes to the left (if the "BOOST" programme is selected, pressing this button causes the "Rapid ≫" programme to be selected).

– The ⟩ button scrolls the programmes to the right (if the "Rapid ≫" programme is selected, pressing this button causes the "BOOST" programme to be selected).

– When a programme is selected, the relevant indicator light illuminates. The screens shows the envisaged time that the programme will end.

Finishing time



Press **"Start**/C"**G**; the screen shows the remaining time for the programme. Close the door; the programme starts.

Programme time remaining, progress

A short audible signal (beep) confirm the button's selection, except for the "On/Off" button.

• *Delaying the end of a programme* Ⓕ

Programme the finishing time, in quarter of an hour stages, by pressing the + or – buttons until you reach the desired time.

Confirm by pressing **"Start"** Ⓖ.
The screen counts down hour by hour until the programme starts.

Waiting for delayed start



Programme time remaining, progress



• *End of the programme* ⇥

The light flashes 15 minutes before the end of the programme and then lights permanents once the programme has finished.

End of programme

• *Cancelling a programme*

Hold down the "Start / Cancel" Ⓖ button for a few seconds.

• *Stopping the appliance*

When the programme has finished, press the "On/**Off**" button Ⓐ.

• *Setting the audible signal*

The setting enables you to activate or de-activate the beep at the end of the programme.
– Access the setting holding down the **"SET"** button Ⓓ until you hear a double signal (long beep). Keep on pressing "Set" successively until you have access to the parameter:

The setting is confirmed automatically after 10 seconds or by pressing "SET" (switching to the next parameter "Screen brightness").

Beep activated

Beep de-activated

• *SAFETY SYSTEMS*

• *Door poorly closed*

If the door is poorly closed, the confirmed programme is automatically cancelled after 3 minutes.
If you open the door during the cycle, the programme light flashes.

• *Programme access lock*

Throughout the period the programme is running, or the full duration of the programme, the programme selector and the buttons are automatically protected from any kind of manipulation. This unlocks automatically at the end of the programme or when the programme is cancelled by holding down the "Start" button for 3 seconds.

• *Advice on cleaning the filters*

Approximately every month, your dishwasher advises you to proceed to service the filters (see Section "Cleaning the waste filters" - Fig. 14-15).

• *Anti-overflow system*

This system activates the drain pump automatically if the water in the tank reaches an abnormal level.

• *Anti-leak protection system*

This system cuts off the water supply if a leak is detected under the appliance.

• *Total safety*

This supply pipe is fitted with a device to cut off the water supply directly at the tap if there is a leak.

• *Alarm light*

For programme errors or incidents (please refer to Section 14 "If an operating abnormality occurs").

NB:
To unlock, hold down the Start / Cancel button for three seconds.

• *CLEANING THE WASTE FILTERS*

The filtration system consists of several elements:

Ⓐ **- The waste filter**

Ⓑ **- The large main filter**

Ⓒ **- The micro filter**

The filters are located in the centre of the tub and must be washed regularly to obtain optimum washing results.

Actions :

① Before removing the filters, remove any waste on the large main filter Ⓑ with a sponge so that the waste does not block the sprinkler arms. Rotate the spray arm as shown in the drawing. (Fig. 14)

② Loosen the waste filter a quarter of a turn and then remove it Ⓐ

③ Remove the main filter Ⓑ

④ Remove the micro filter Ⓒ

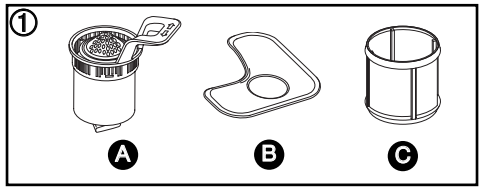

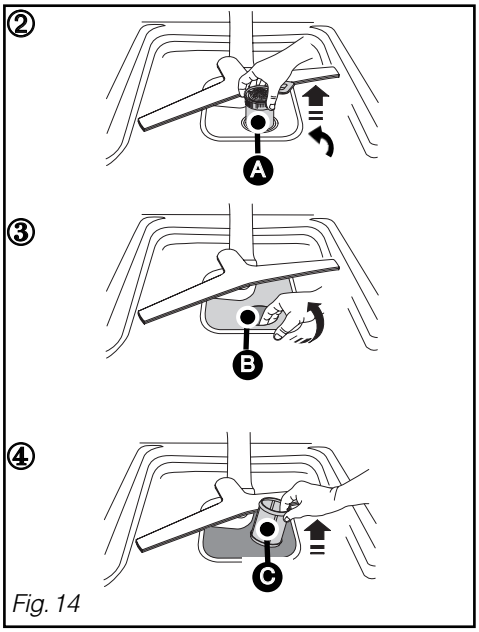

Fig. 14

⑤ Carefully clean filters Ⓐ, Ⓑ and Ⓒ under running water (Fig. 15)

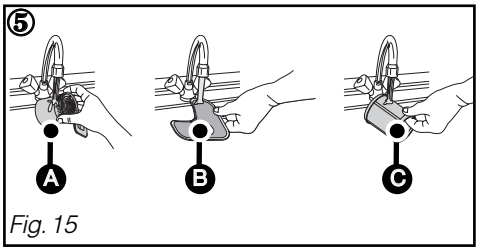

Fig. 15

Re-installation:

Proceed in reverse order, inserting filters Ⓒ and Ⓑ and then Ⓐ

Important :

Remember to lock the waste filter Ⓐ in place by pushing it in fully and turning it a quarter turn.

EN 13/ CLEANING YOUR APPLIANCE

• *Periodically*

Every 3 or 4 months, in order to remove any deposits, run a special maintenance programme, without any items in the machine, using a special dishwasher cleaning product.

Important :

Keep this product out of children's reach.

• *If not using your dishwasher for a prolonged period:*

Clean your dishwasher completely and then unplug it from the electricity supply and close the water tap. Protect your machine from potential frost.

Advice :

Do not use abrasive powders, metal sponges and alcohol-based or thinner-based products. Use a cloth or a sponge.
If you are moving house, run a soaking programme first of all, in order to avoid any water escaping.

• *SUMMARY OF THE FAULTS*

d01: water supply fault (tap)	**d07:** overflow / anti-leak fault
d02: draining fault	**d08:** sprinkling distribution fault
d03: heating fault	**d11:** pressure sensor fault
d04: temperature fault	**d12:** filling fault (water inlet detection system)
d05: fault – motor under load	**d13:** overheating fault
d06: fault - motor overload	**d14:** pump filling fault

• *BEFORE CALLING FOR SERVICE*

Problem	*Possible causes*	*What to do?*
The door falls heavily when opened (integratable model)	- Door springs not tensioned enough to compensate for the weight of the panel.	- Tighten the two tensioning screws accessible in the bottom section above the front feet.
The door does not stay horizontal when open or returns too quickly (integratable model)	- Door springs tensioned too much. - No wooden panel.	- Loosen the two tensioning screws accessible in the bottom section above the front feet. - Fit a temporary wooden panel on the appliance and adjust the springs.
The door catches when closing	- Appliance not stable - Door not centred on the tub	- Adjust the feet. - Re-centre by adjusting the rear feet.
The upper basket does not stay in the high position	- Poor manipulation (the basket is being pulled upwards too quickly)	- Act more progressively (see instructions), one side and then the other.
Small leak around or under the appliance (move the appliance to locate the leak)	- Leak from the tap. - Leak from the appliance. (Cf. table fault d07).	- Check that a seal is fitted and retighten the nut. - Close the water tap and call a technician.
Small leak at the door	- Appliance not stable or not level - Door not centred on the tub.	- Adjust the feet. - Re-centre by adjusting the rear feet.

EN 14/ IF OPERATING ABNORMALITIES OCCUR

• *THE INDICATOR LIGHTS*

Problem	*Possible causes*	*What to do?*
The salt light does not go out	- No salt or an insufficient quantity of salt in the tank to trigger the float.	- Refill the tank and wait for the cycle to end. If you have soft water that requires no salt, the light is constantly lit.
The lights all light up one after the other A light flashes and the programme does not start	- Wrong programme. - Programme selector wrongly positioned (between two notches)	- Cancel the current programming by holding down the Start button for 3 seconds and then re-programme. - Reposition the selector on a programme.

• *RELATING TO PROGRAMMING, DISPLAY*

Problem	*Possible causes*	*What to do?*
The cycle lasts too long	- The energy-saving programmes last longer because the agitation and drying times are longer to compensate for the lower washing and drying temperatures	- Use these programmes preferably at night when it is not so important how long the programme lasts or when it ends.
The appliance trips the circuit breaker	- Insufficient amperage to supply all the appliances being operated simultaneously. - Internal fault in the appliance.	- Check the socket's amperage (10A minimum) and the meter's capacity. - Call a technician.
The appliance does not start	- No mains power to the socket. - Tap closed (Cf. table fault d01). - Water supply hose kinked. - Selection error or programme blocked. - Start button pressed too long (greater than 2 secs). - Appliance in Safety mode (anti-leak) (Cf. table fault d07).	- Check the socket and the fuse - Check the tap is open. - Check the hose line is OK. - Cancel by holding down Start for 3 secs and re-programme. - Just press Start briefly to start the programme. - Call a technician.

Problem	*Possible causes*	*What to do?*
The appliance will not restart	- Door opened during a washing cycle.	- Wait for the time delay to end (controlled internally by the appliance).
The appliance does not drain (Cf. table fault d02).	- The cover has not been removed from the sink's U-bend. - Drain hose kinked. - Filters totally blocked. - Pump blocked.	- Remove the cover. - Check the drain hose line behind the machine is OK. - Remove and clean the filters and the drain. - Initiate a Soaking programme If the fault persists, call a technician.

• *POOR WASHING RESULTS*

Problem	*Possible causes*	*What to do?*
Food traces and deposits in the glasses	- Items poorly arranged (masked by another larger item or situated underneath it, items nested or jammed together). - Upper spray arm blocked by cutlery or a dish etc. - Filter poorly locked and lifting during washing. - Micro filter screen clogged. - One or more holes in the spray arm blocked.	- Arrange the items properly. Use the most appropriate areas and accessories for each type of item (see instructions). - Check that the spray arm rotates freely. Set the basket in the high position if necessary. - Check the filter's facing and that the filter is locked in place (push it in fully, turning it to the right). - Remove all the filters and clean them (in warm water), including the micro filter's screen (once a month). - Remove the spray arm by turning the lever a quarter of a turn and clean it under the tap (do not use any tool that could damage the holes). Re-install the spray arm.
Traces of grease	- Detergent dose too low; inefficient detergent; stale product. - Inappropriate programme (temperature too low; duration too short).	- Increase the dose; try another detergent. - Select a programme with a higher temperature.

• *POOR WASHING RESULTS...*

Problem	*Possible causes*	*What to do?*
White marks (identify what type)	- Chalky film (removable with vinegar). - Traces of salt (items have a salty taste).	- Check that there is salt in the tank (light unlit = OK). - Check the water hardness at the tap and that the water softener is set correctly. Adjust it to a higher level if necessary. - Water too hard for using a "4-in-1" detergent without the addition of salt. - Check that the stopper on the salt container is closed correctly.
White marks (identify what type)	- Glass cloudy because water too soft (cannot be removed).	- Check the water hardness at the tap and that the water softener is set correctly. Some detergents in pellet form are more aggressive to glasses and decorations (change the product and use a protective product if necessary).
Coloured marks (tea, wine, coffee)	- Items poorly arranged - Detergent dose too low; inefficient detergent - Programme temperature too low. - If you use a multifunction product.	- Turn the cavities in the items towards the jets. - Increase the dose; try another detergent. - Select a more suitable programme with a higher temperature. - Use the "4-in-1" option (depending on the model).
Streaks or dried droplets on glasses	- Lack or insufficient amount of rinsing product. - Rinsing product out-of-date or inefficient. - If you use a multifunction product.	- Check the indicator light and fill the tank completely. Adjust the dispensing unit to a higher position if necessary. - Use a recent product (a good product dilutes easily and foams in cold water). - Use the "4-in-1" option with a setting prioritizing drying (parametering from the menu – depending on the model).
Dried-on marks on glasses, dullness.	- If you use a multifunction product.	- Use the "4-in-1" option with a setting prioritizing brilliance (parametering from the menu – depending on the model).

• POOR OPERATION

Problem	Possible causes	What to do?
Constant filling	- Drain hole situated too low for the appliance (Cf. table fault d012).	- Drain wand has fallen on the floor.
A lot of waste on the large filter at the end of the cycle.	- The filters and drain outlets are blocked with too much residue.	- Remove and clean the filters and the bottom of the drain outlets. Remove large residue from the plates before putting them in the machine.
Traces of rust on stainless steel	- Quality of the stainless steel ; not dishwasher-safe (knives in particular)	- Use “special dishwasher-safe” cutlery. - Check that the lid on the salt container is closed correctly.

• POOR DRYING RESULTS

Problem	Possible causes	What to do?
A lot of droplets on the glasses	- Lack or insufficient amount of rinsing product. - The dose has not been distributed. - Positioning of the items.	- Check the indicator light and fill the tank completely. - If the tank is not empty after approximately 60 washings, call a technician. - Arrange the items to restrict water retention as much as possible. Leave the door ajar for a few minutes, if possible
Droplets on plastic items, Tefal coatings, etc.	- These items have a low calorific mass.	- Arrange the items in the upper basket.
Poorer drying on rapid programmes	- On rapid programmes, the drying temperature and drying period are reduced to cut down the duration of the cycle as much as possible.	- Leave the door ajar for a few minutes.
Condensation on the wall of the inside door or the tub.	- Condensation may form on the walls, particularly after the appliance has cooled down (sound insulation increases this occurance)	

• *INTERVENTION WORK*

Any intervention work on your appliance must be performed by a qualified professional approved by the manufacturer. When you call, please mention the full reference for your appliance (model, type and serial number). This information is shown on the description plate (see Fig. 16)

ORIGINAL PARTS

When maintenance is being carried out, ask for only certified original spare parts to be used.

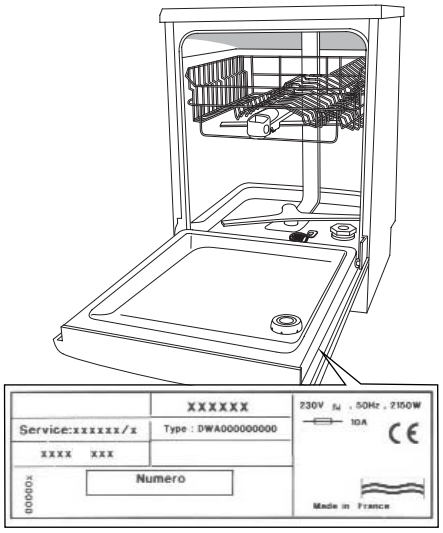

Fig. 16

EN 15/ INDICATIONS FOR THE TESTING LABORATORIES

• *Details common to all models*

– Washing capacity ---------- 12 standard place settings
– Arrangement of the items ---------- Figs. A-B-C; see next page
– Loading as per the indications on next page, without side shelves or stemmed glass support, and 5 cup/saucer supports (4 for12 saucers & 1 for 2 cups)
– Setting for upper basket ---------- Low position
– Setting for rinsing product distributor ---------- 3
– Adjusting the water softener ---------- ć

For detailed information on the comparison tests regarding the level of soiling, the types of crockery and cutlery, etc., contact the equipment manufacturer before commencing the tests.

• *Tests to Standard EN 50242:*

– Recommended programme ---------- WASH
– Dosage of detergent ---------- 30g of detergent B

• *Tests according to the mixed IEC 436/DIN 44990) method*

– Recommended programme ---------- **“Eco”**
– Dosage of detergent ---------- 5 + 25g of detergent B

NB: When conducting tests using a multi-function tablet:
- Check that the water softener is correctly set for the water hardness
– Pull out the detergent distribution drawer and place the tablet in the interior compartment.
– Select the “4/1” option on the control panel.

• *Measuring the noise level in accordance with Standard EN60704-2-3:*

– Align the plinth on the housing unit with the door panel.

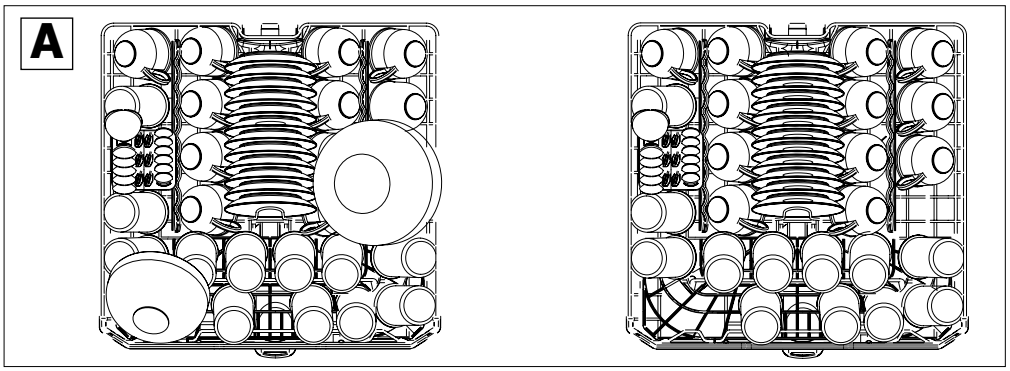
A

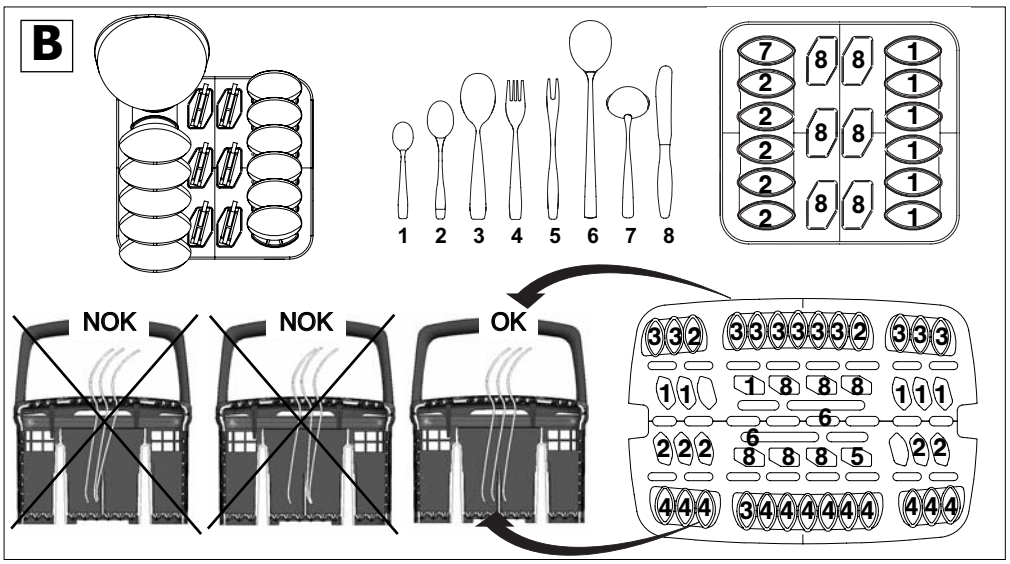
B
1 2 3 4 5 6 7 8
NOK
NOK
OK

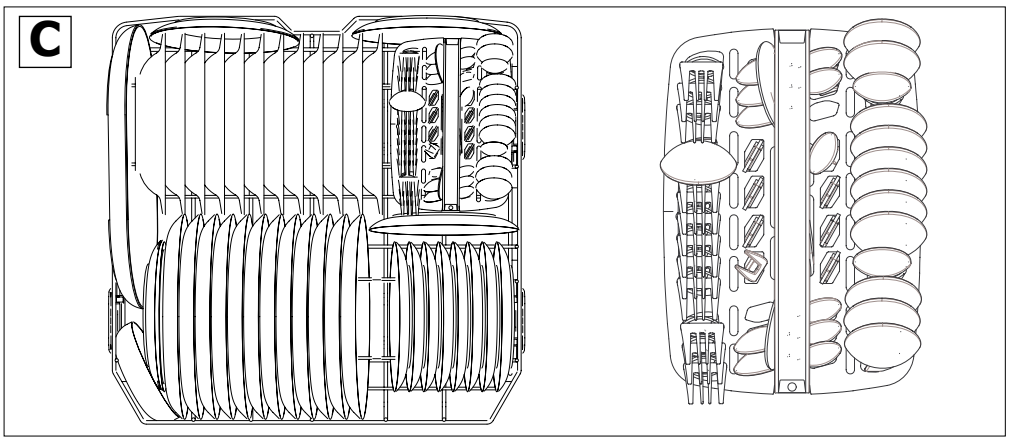
C

EN NOTES

EN NOTES

EN NOTES

EN After Sales Service:

Any maintenance on your equipment should be undertaken by:
- either your dealer,
- or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.

FR Service après vente :

Les éventuelles interventions sur votre appareil doivent être effectuées :
- soit par votre revendeur,
- soit par un autre professionnel qualifié dépositaire de la marque.

Lors de votre appel, mentionnez la référence complète de votre appareil (modèle, type et numéro de série). Ces renseignements figurent sur la plaque signalétique fixée sur votre appareil.

DE Kundendienst :

Eingriffe an Ihrem Gerät dürfen nur:
- von Ihrem Händler oder
- von einem sonstigen Fachmann und Vertragshändler der Marke durchgeführt werden.

Geben Sie bei der Meldung einer Störung die vollständige Typenbezeichnung Ihres Gerätes an (Modell, Typ, Seriennummer). Diese Angaben finden Sie auf einem an Ihrem Gerät angebrachten Schild.

ES Servicio postventa :

Las intervenciones que requiera la máquina deberán ser efectuadas:
- por el revendedor,
- o por cualquier profesional cualificado depositario de la marca.

Al llamar, mencione la referencia completa de la máquina (modelo, tipo y número de serie). Estos datos figuran en la placa de identificación situada en la máquina.

PT Serviços autorizados :

Qualquer intervenção no seu aparelho deve ser realizada:
- quer pelo seu revendedor,
- quer por outro profissional qualificado autorizado pela marca.

Ao chamá los, indique a referência completa do seu aparelho (modelo, tipo e número de série). Estas informações figuram na placa de identificação fixada no aparelho.

DA Kundeservice :

Eventuel vedligeholdelse af apparatet skal foretages:
- enten af Deres forhandler,
- eller af en kvalificeret fagmand, som er anerkendt til dette mærke.

Når De ringer op, skal De angive apparatets fulde reference (model, type, serienummer). Disse oplysninger står på typeskiltet, der sidder på apparatet.

NL Serviceafdeling:

De eventuele ingrepen in de machine moeten worden uitgevoerd :
- of door uw vakhandelaar,
- of door een andere gekwalificeerd technicus van dit merk.

Tijdens het telefoneren, dient u de complete referentie op te geven van uw machine (model, type, serienummer). Deze informatie staat op het typeplaatje op de machine.

PL Usługi serwisowe :

Wszelkie czynności serwisowe wykonywane na urządzeniu muszą być wykonane przez:
- sprzedawcę,
- wyspecjalizowany zakład naprawczy posiadający atest producenta.

Aby przyspieszyć i ułatwić obsługę prosimy o podanie dokładnych danych dotyczących urządzenia (model, typ, numer seryjny). Wszystkie te dane znajdują się na tabliczce znamionowej umieszczonej na urządzeniu.

CS Záruční servis:

Případné opravy na přístroji může provádět pouze :
- váš prodejce
- nebo záruční opravna, která má smlouvu s výrobcem

Při telefonickém styku uvádějte úplné označení vašeho přístroje (model, typ a výrobní číslo). Tyto údaje jsou uvedeny na výrobním štítku přístroje.

RU Сервисное обслуживание:

При необходимости ремонта Вашей машины, он должен производиться:
- либо тем, кто ее продал Вам;
- либо специалистом, имеющим квалификацию по ремонту данной модели.

При обращении в службу ремонта укажите все данные Вашей машины (модель, тип и серийный номер). Эти данные указаны на идентификационной табличке, закрепленной на устройстве.

EL Τεχνική υποστήριξη:

Οι ενδεχόμενες επεμβάσεις πάνω στη συσκευή σας θα πρέπει να διενεργούνται:
- είτε από τον προμηθευτή σας,
- είτε από το κατά τόπους εξουσιοδοτημένο σέρβις.

Σε περίπτωση που τηλεφωνήσετε, θα πρέπει να αναφέρετε όλα τα στοιχεία της συσκευής σας (μοντέλο, τύπο και αριθμό σειράς).Τα στοιχεία αυτά αναγράφονται στην ετικέτα των χαρακτηριστικών του κατασκευαστή που βρίσκεται πάνω στη συσκευή.

B3244-B–10/06

Brandt Appliances - SAS au capital de 10.000.000 euros - RCS Nanterre 440 302 347

Photographie de couverture/front cover photography: Michel Gibert